

# PARTS & ASSEMBLY SHEET

Fixture Name:

Torbellino 8106-D5 CDB

This fixture assembled PO:\_\_\_\_\_ Date: \_\_\_

**Notice:** Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note onthis sheet and contact the place of purchase to arrange for replacement parts.


PARTS LIST		Company Name:_ to be filled out by ret		Co. Account #:	
Canopy		Hex Nut		Canopy loop and Canopy loop collar	
1ea Ф153*32Hmm		lea Φ19mm*4mm		1ea Φ25*45Hmm	
Chain		Threaded rod		Wire connectors	
1ea 6ft		lea Φ12*55mm		3ea Orange	
Chain connector		Mounting Strap		Mounting Screws	
2ea 23.8*59mm		1ea 100mm*20mm,1e	а Ф9*10mm	2ea 8/32T*1-1/4"L	
Part Needed				Quantity	
Part Needed				Quantity	
Reason why Comments	(missing, scratche	d, broken glass, be	ent, bad finish)		

### FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

1. Feed the fixture wires through the Top loop (J) and pull the wires until taut.

2. Then screw the Top Loop (J) to the top of Frame (K) until tight.

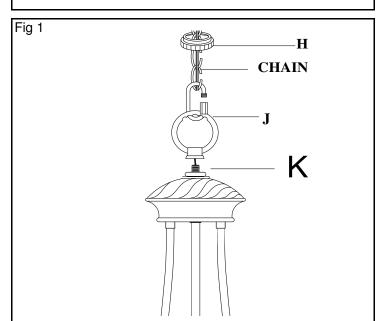

8106-D5 CDB

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

For Customer Service, contact the place of purchase to arrange for replacement parts.

### PARTS & ASSEMBLY SHEET

#### Fixture Name:

Torbellino 8106-D5 CDB

3. Unscrew two of the Deco screws (L) from the Frame (K) and save.

4. Two arms are already attached to the Frame.Gently spread the arms until evenly spaced.5. Align the hole in lower side of Frame arm (K) with hole Frame(K). Secure in place with the Deco screw (L).

6. Repeat with remaining arms and Deco screws.
\* NOTE: The Finial can be scratched or broken if the full weight of the fixture is placed on it. To avoid damage attach Finial after hanging the fixture.
7. Attach Finial (N) to the base of fixture Frame (K) but the adiabattach Finial (N).

by threading the Finia I(N) onto the threaded rod (M) until tight.

8. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (C2) then remove the excess Chain (C2) and discard it.

 Use one chain connector(E2) to attach one end of the chain to the Top loop (D2) and close the chain connector.

10. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.

11. Slip Canopy loop collar (B2) over the chain, then do the same with the canopy (F2).

12. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (A2) and close the chain connector.


13. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.\* You may now install the fixture


\* You may now install the fixture.


Note: Complete these remaining steps after the fixture is hung.

14. Place the Glass Shade (P) over the Threaded Socket (O),place the Socket washer (Q) over the threaded socket (O) then secure the Glass Shade (P) by threading by the Socket Ring (R) until tight.15. Install the light bulbs in accordance with the fixture's specifications.

(DO NOT EXCEED THE MAXIMUM WATTAGE RATING)

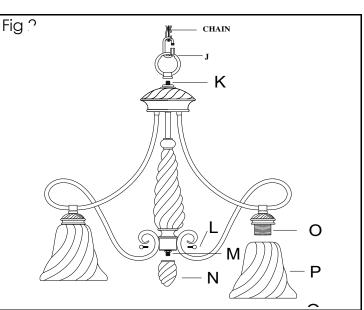

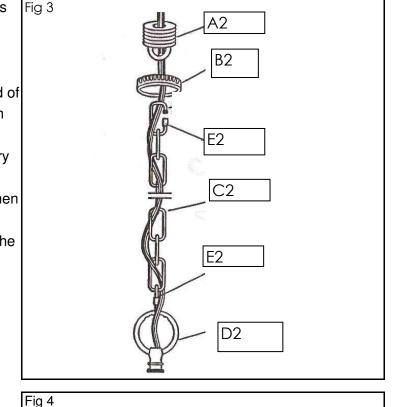

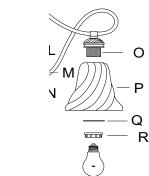

For Customer Service, contact the place of purchase to arrange for replacement parts.



# **INSTALLATION INSTRUCTIONS**

Fixture Name:

Torbellino 8106-6, -9, -D5, -M1L CDB

For Chandelier Light Fixture

### WARNING ! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

#### HANGING THE FIXTURE (Fig.1)

1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.

2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.

3. Thread Nipple(C) into Canopy Loop (F) until snug.

4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).

5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.

6. Take this mounting strap assembly and mount to ceiling junction box with junction box Screws (E). Tighten screw securely with screw driver.

7. Unscrew the Canopy loop collar (H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximatly one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. \*the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.

8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.

9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

### CONNECTING THE WIRES (Fig 2)

10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).

11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.


- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

12. Tuck these wire connections neatly into the Junction Box.

13. Raise Canopy (G) to the ceiling and secure in place by

tightening the Canopy loop  $\mbox{collar}(H)$  into the Canopy  $\mbox{Loop}(F)$ 

14. Install the light bulbs and glass shade as per the fixture assembly sheet.

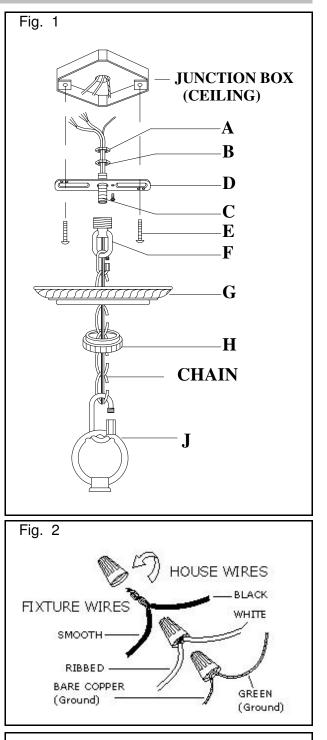

YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.

For Customer Service, contact the place of purchase to arrange for replacement parts.