


ASSEMBLY INSTRUCTIONS

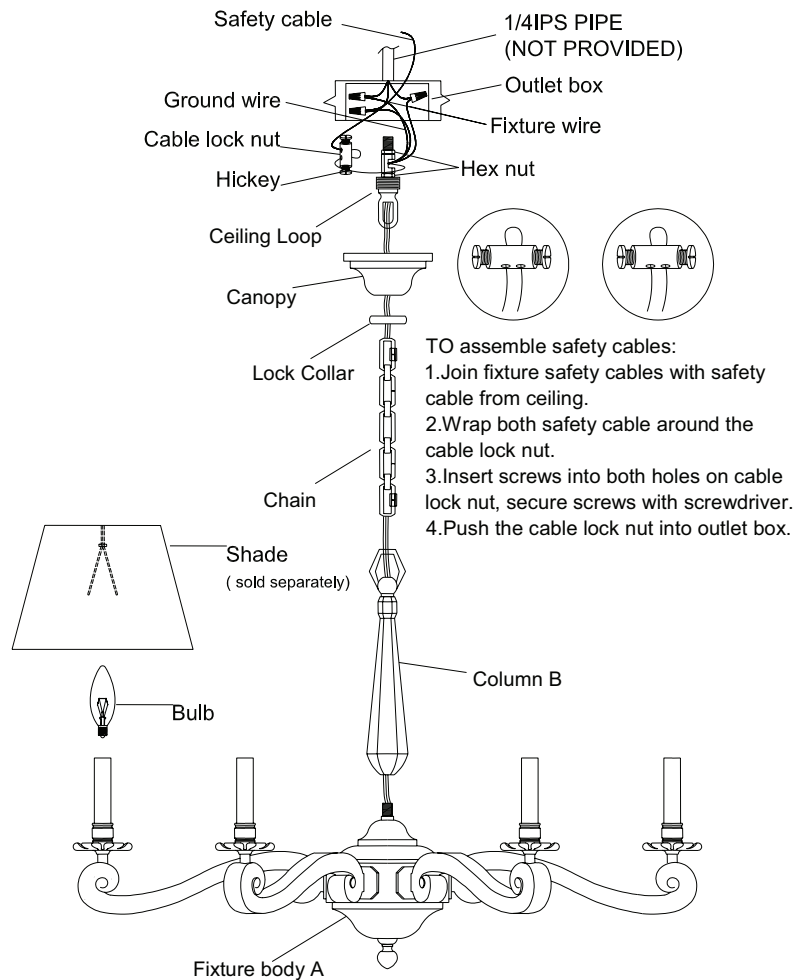

Myrna Chandelier

Item # AH5010

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully turn column B clockwise to fixture body A. Loosen the lock collar to release the canopy. Carefully slip the lock collar and canopy down over the chain to rest on the fixture body. Do not scratch the finish.
2. Using the dimensions of the fixture as a guide, shorten the chain provided using a pair of chain pliers. Take into consideration that you will use the chain end link to mount the chandelier once you have cut the chain.
3. Unscrew the collar on the chain end link. Attach the chain end link to the ceiling loop.
4. Attach the chain (now desired length) to the chain end link. Close the threaded collar to secure the chain.
5. Unscrew the threaded collar on the other chain end link. Attach the chain end link to the lower end of the chain.
6. Install the ceiling loop into the top of the junction box. You must provide a 1/4 IPS threaded nipple which will go through the top of the junction box and through a structural member of the building. Leave the loop loose while you place the canopy and lock collar into place to set the depth of the loop. Once you have made certain that the canopy and lock collar will install easily, secure the ceiling loop, by tightening the hickey into place. Tighten all hex nuts using an adjustable wrench and a pair of pliers.
7. **WIRING:** Connect the Neutral (ribbed edge, no markings, or white) fixture wire with the Neutral (usually white) wire from your outlet box using the appropriate wire connector and wrap with electrical tape.
8. Connect the Hot (smooth edge, markings, or black) fixture wire with the Hot (usually black) wire from your outlet box using the appropriate wire connector and wrap with electrical tape.



VISUAL COMFORT & Co. Est. 1987

ASSEMBLY INSTRUCTIONS

Myrna Chandelier


Item # AH5010

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

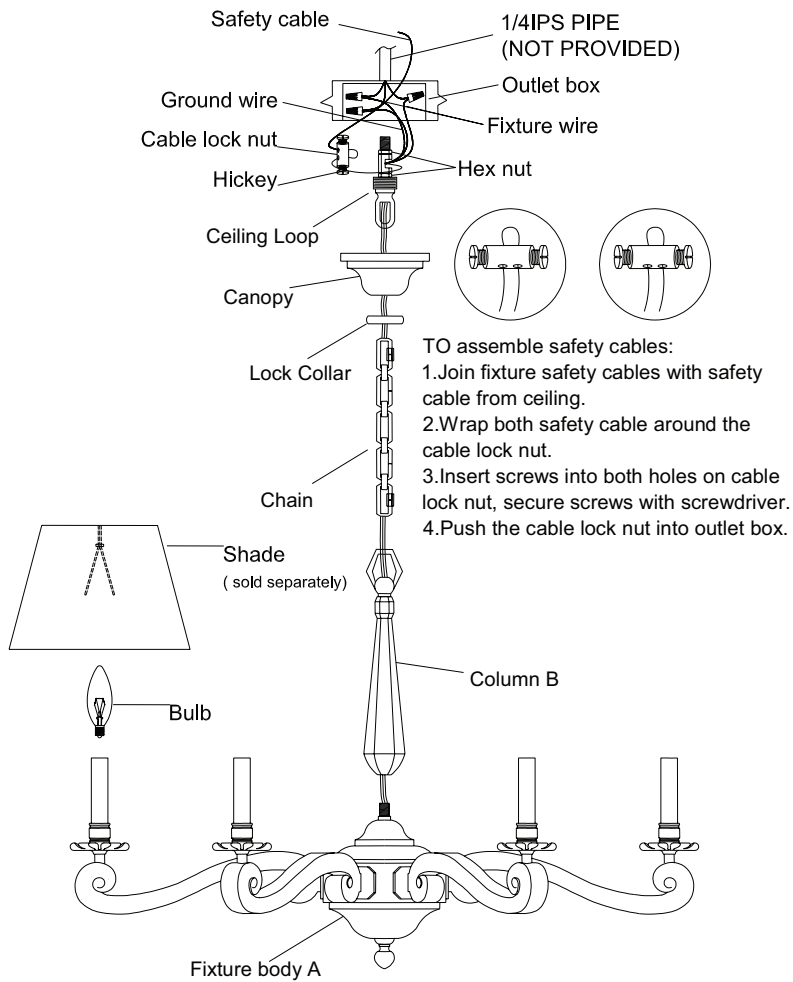

9. Connect the Ground (bare) fixture wire with the ground (usually bare) wire from your outlet box.

****IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED****

10. Tuck these wire connections neatly into the ceiling junction box.
11. Raise the lock collar and thread onto ceiling loop to secure canopy.

