


## ANTI TIP KIT INSTRUCTIONS

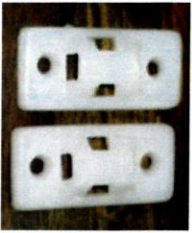

**Brackets**  
4 Pieces



**Dry wall anchors**  
4 Pieces




**Long screws**  
4 Pieces



**Small screws**  
4 Pieces



**Straps**  
2 Pieces

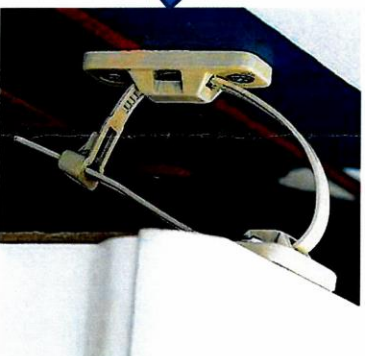

1. Using short screws, attach one of the brackets toward one side of the rear of the furniture frame below the level of the top. Repeat this step for the opposite side of the back of the furniture frame.
2. Move furniture into its final position to measure and mark location to attach the brackets to the wall. Then move the furniture out the way so that the brackets can then be mounted to the wall.
3. Attach the brackets to the marked locations on the wall with long screws. Use screw anchors if you are mounting to dry wall.
4. Move the furniture into its final position. Thread the strap through the bracket as shown below. Carefully tighten strap until snug, but do not over tighten.